

GENERAL INSTRUCTIONS FOR USE AND MAINTENANCE OF DIESEL INJECTION EQUIPMENT

- The physical-chemical parameters of the diesel fuel injection equipment should be in accordance with the engine manufacturer specifications, and free from water and other impurities.
- Engines should not be run without filters specified by the manufacturer
- Fuel Filters must be replaced as specified by the engine manufacturer
- After any work is carried out on the fuel system of an engine it will be necessary to remove the air from the system.
- Only trained engineers should undertake the work carried out on the diesel fuel injection systems.
- Failure to follow the instructions listed above will invalidate the warranty.
- After fitting this injector pump please fully bleed the fuel system using the hand primer on the fuel lift pump. Fuel must be in the injector pump before turning the engine over with the starter motor. Failure to comply with this may invalidate any warranty claim.
- Sparex reserve the right to return any failed pumps to our supplier for report before allowing any possible credit.