

Instructions Remote Control Valve Kit S.65502



- 1 Lower lift arms.
- 2 Remove transfer cover from right hand front of lift cover making sure O-ring and back-up ring stay on the stand pipe.
- 3 Install new o-rings on bottom of valve. Place gasket on lift cover and set valve down onto lift cover taking care not to damage any o-rings or gasket.
- 4 Install new bolts and tighten evenly.
- 5 Place copper washers onto adaptors (without o-rings) and thread into valve. Tighten adaptors.
- 6 Thread the 90° end of hose onto valve. DO NOT TIGHTEN.
- 7 Thread the JIC adaptors into hoses and tighten.
- 8 Mount bracket on right hand rear axle casting.
- 9 Thread couplers onto hoses and tighten.
- 10 Install snap ring in hose end of couplers. Push couplers through brackets and install snap ring.
- 11 Tighten hose at valve end, leaving slack so hoses can move when coupling and uncoupling.
- 12 Install handle on valve and tighten set screw.
- 13 The flip handle on top of valve is used to hold the remote handle in the back position.
- 14 The other handle is used to select either remotes or 3-point. When using remotes, place pump into constant pumping.
- 15 When valve is in the 3-point position, run 3-point as normal.