


# Instructions for Wiring Harness S.67707

**Fits: Ford 601, 701, 801, 901, 2000, 4000 Gas**

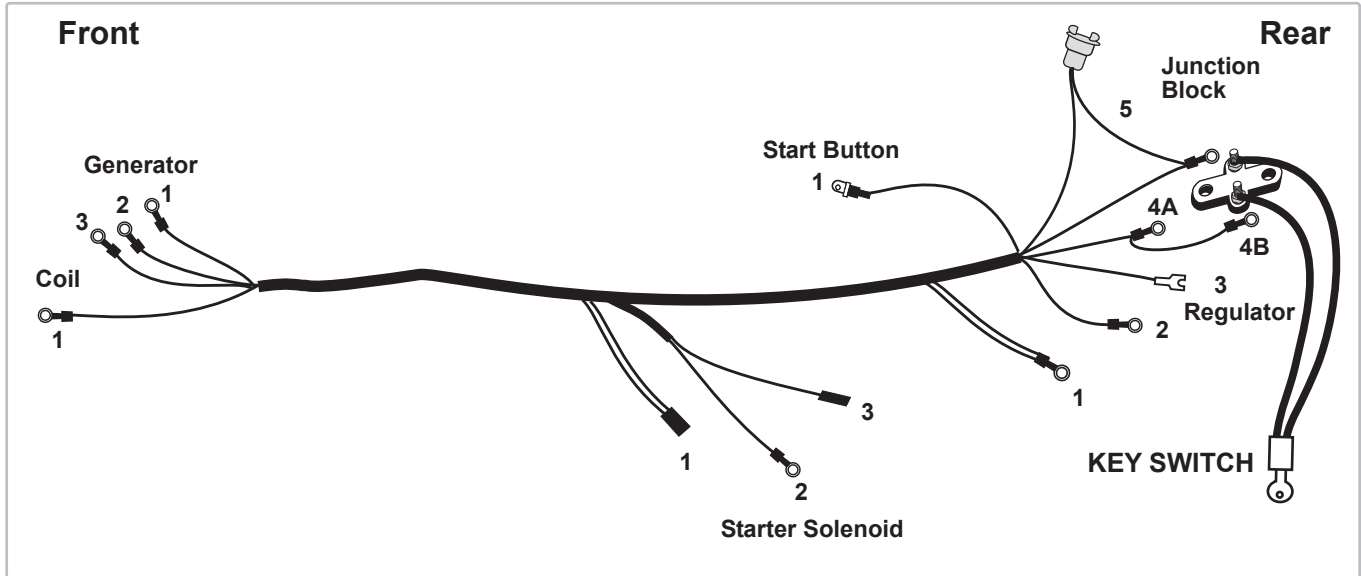

## COMPLETE HARNESS

### GENERATOR

- |          |                                 |
|----------|---------------------------------|
| 1- Red   | Armature - Rear Terminal        |
| 2- White | Field - Insulated Terminal      |
| 3- Black | Ground - Non-Insulated Terminal |

### COIL

- |               |      |
|---------------|------|
| 1- Red (Long) | Coil |
|---------------|------|

### START BUTTON

- |                  |                            |
|------------------|----------------------------|
| 1- Red (w/ Boot) | Starter Push Button Switch |
|------------------|----------------------------|

### STARTER SOLENOID

- |               |                    |
|---------------|--------------------|
| 1- Double Red | (S-Terminal)       |
| 2- Yellow     | (Battery Terminal) |
| 3- Red        | (I-Terminal)       |

### REGULATOR

- |                        |   |
|------------------------|---|
| 1- Double Red          | Armature  |
| 2- Black               | Ground  |
| 3- White               | Field   |
| 4A- Double Yellow      | Battery   |
| 4B- Yellow             | <b>Junction Block w/ 1 Key Switch Wire Only</b> |
| 5- Double Red w/ White | <b>Junction Block w/ 1 Key Switch Wire</b>      |