


Wiring for White Oliver Instrument Cluster S.53161

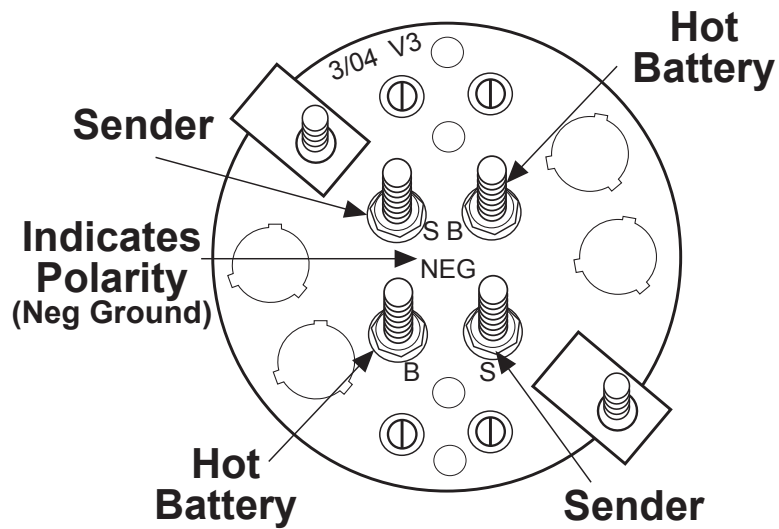

**Fuel & Temperature Senders,
Case Must be Grounded**