


Alternator Wiring Instructions S.61021

Fits: Ford 601, 701, 801, 901, 2000, 4000

NOTE:

- This is a 12 "VOLT" system. The battery must be changed to 12 VOLT negative ground.
- Gas Models Must Change Fuel Gauge.
GAUGE - S.61421,
SENDER - S.61422 (601, 701, 2000)
SENDER - S.61423 (801, 901, 4000)
- This kit does not include spark plug wires.
- Blue wire is not used in this application.

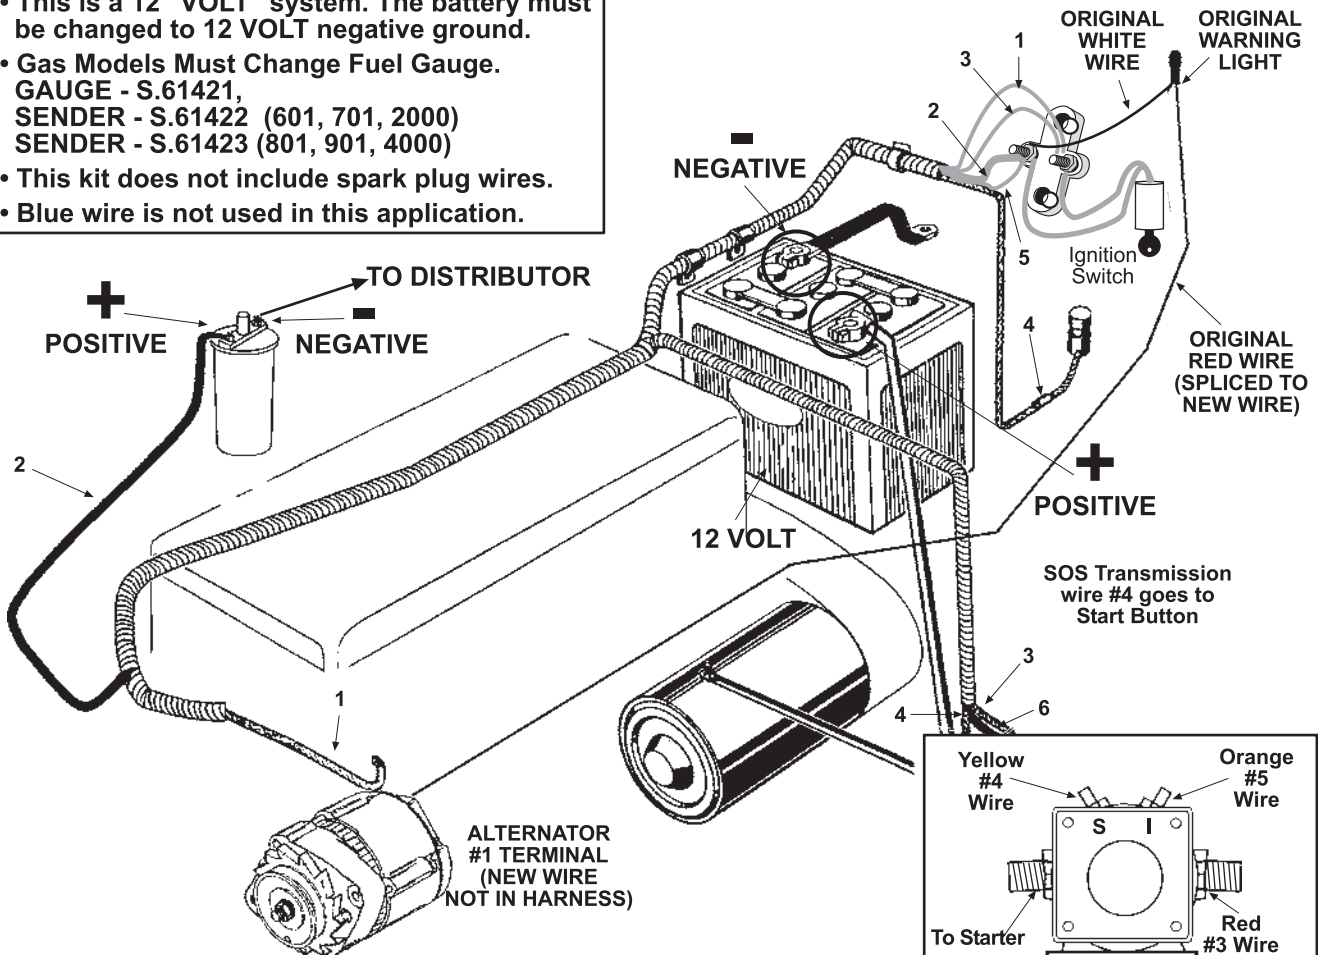

**Wiring Color Code for Ford Alternator
601, 701, 801, 901, 2000, 4000 (58-64)**

COLOR	LOCATION
1 RED	ALTERNATOR
1 RED	JUNCTION BLOCK - RH TERMINAL
2 WHITE	COIL
2 WHITE	JUNCTION BLOCK
3 RED	SOLENOID (Battery Side)
3 RED	JUNCTION BLOCK - RH TERMINAL
4 YELLOW	SOLENOID
4 YELLOW	STARTER BUTTON
5 ORANGE	JUNCTION BLOCK
5 ORANGE	SOLENOID