


## Alternator Wiring Instructions S.61050

Fits: Ford 8N (Early, Front Mount Distributor)

**NOTE:**

- This is a 12 "Volt" system. The battery must be changed to 12 Volt negative ground.
- A standard Ford Resistor is used in this system.
- The orange wire is not used in this application.
- This kit does not include spark plug wires.
- If key is left on with engine not running, coil could be damaged.

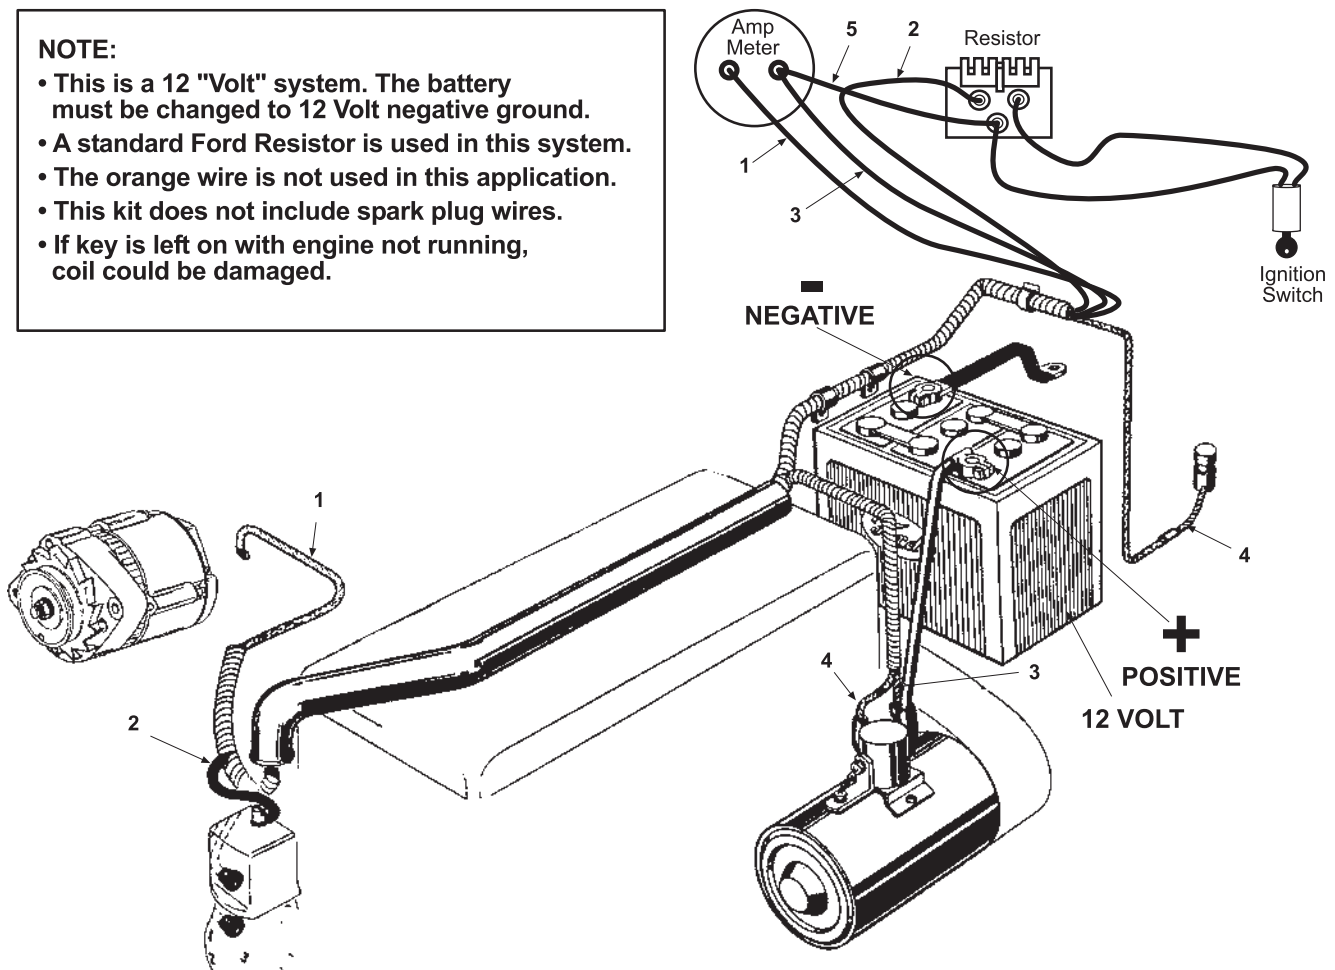

**Wiring Color Code for Ford Alternator,  
8N Front Mount Distributor (48-4/50)**

COLOR	LOCATION
1 RED	ALTERNATOR
1 RED	AMMETER
2 WHITE	COIL
2 WHITE	RESISTOR BLOCK
3 RED	SOLENOID (w/ Battery Cable)
3 RED	AMMETER
4 YELLOW	SOLENOID (Small Terminal)
4 YELLOW	STARTER BUTTON
5 BLUE	+ SIDE AMMETER
5 BLUE	RESISTOR BLOCK

**Bracket Instructions**

ATTACH TO THE  
TWO RIGHT FRONT  
HEAD BOLTS

