


Alternator Wiring Instructions

S.61050

Fits: Ford 9N, 2N

NOTE:

- This is a 12 "VOLT" system. The battery must be changed to 12 VOLT negative ground.
- A standard Ford Resistor is used in this system.
- The yellow and orange wires are not used in this application.
- This kit does not include spark plug wires.
- If key is left on with engine not running, coil could be damaged.

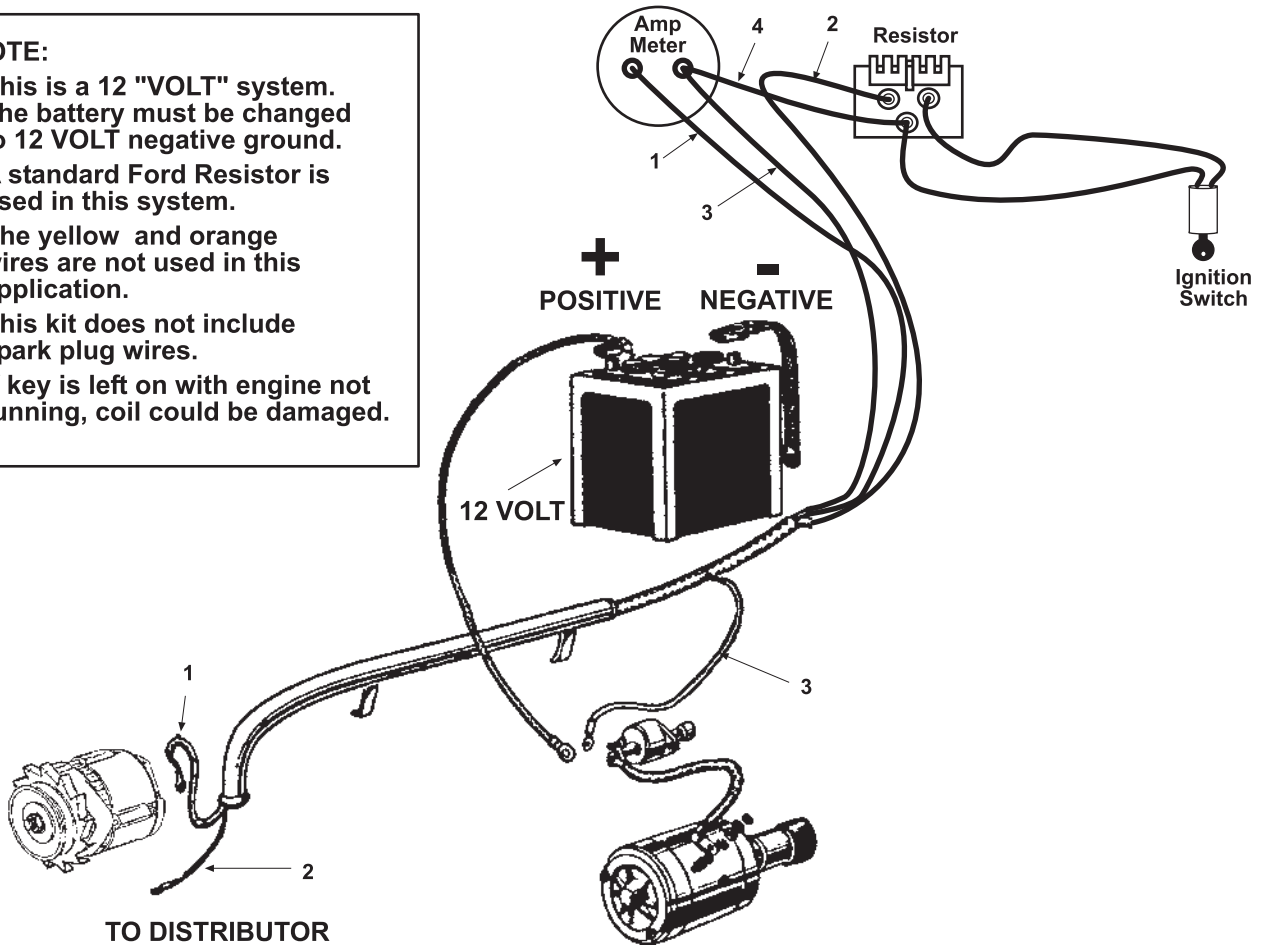

Wiring Color Code for Ford Alternator, 9N, 2N Front Mount Distributor (39-47)

COLOR	LOCATION
1 RED	ALTERNATOR
1 RED	AMMETER
2 WHITE	COIL
2 WHITE	RESISTOR BLOCK
3 RED	SOLENOID (Battery Side)
3 RED	AMMETER
4 BLUE	+ SIDE AMMETER
4 BLUE	RESISTOR BLOCK

Bracket Instructions

