


Alternator Wiring Instructions S.61051

Fits: Ford 8N (Late, Side Mount Distributor)

NOTE:


- This is a 12 "VOLT" system. The battery must be changed to 12 VOLT negative ground.
- The orange wire is not used in this application.
- This kit does not include spark plug wires.

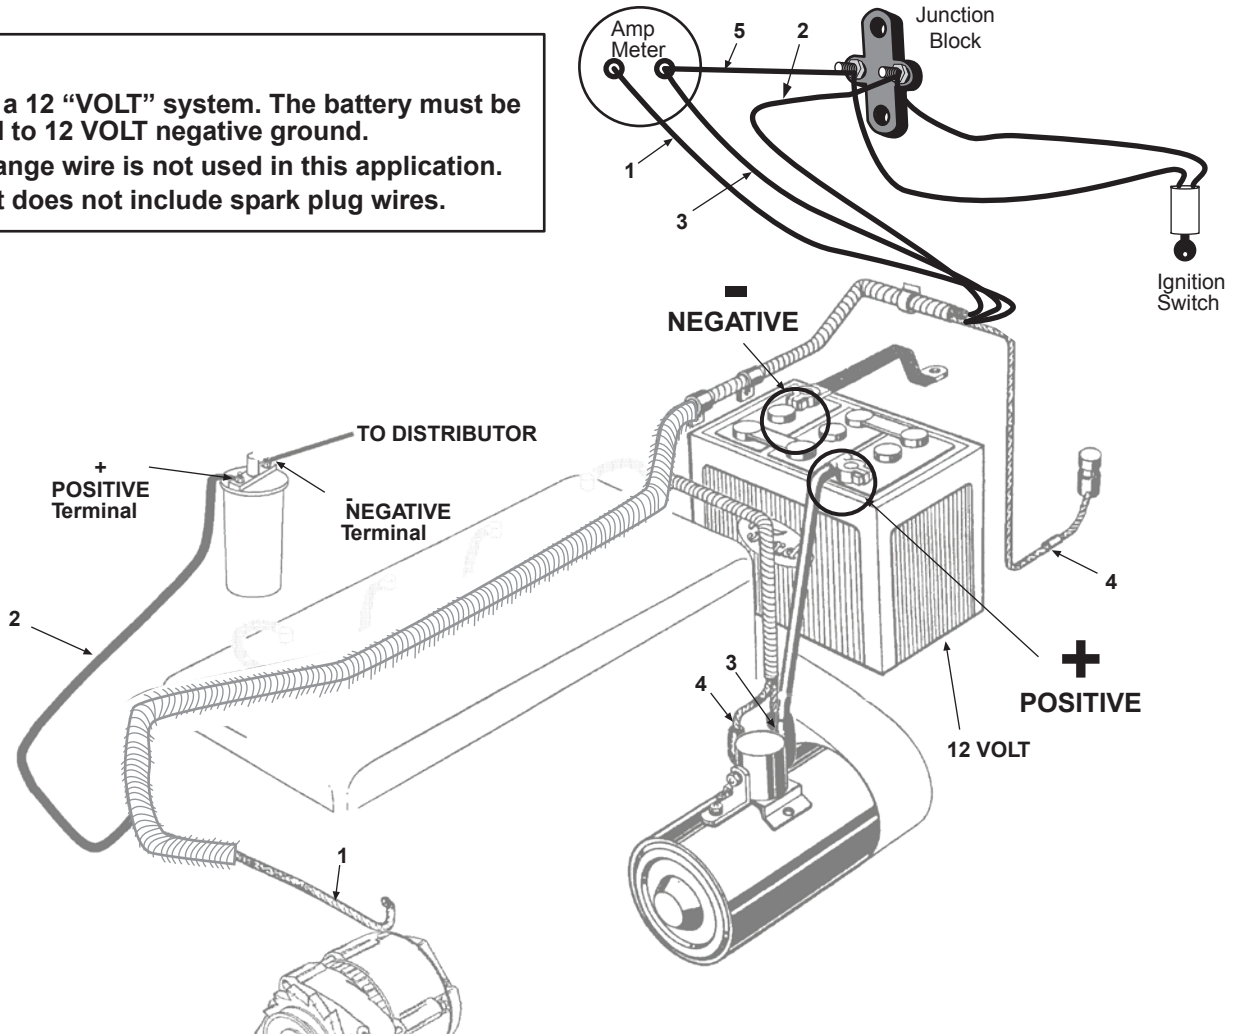

**Wiring Color Code for Ford Alternator
8N, Front Mount Distributor (50-52)**

COLOR	LOCATION
1 RED	ALTERNATOR
1 RED	AMMETER - LH TERMINAL
2 WHITE	COIL
2 WHITE	RESISTOR BLOCK
3 RED	SOLENOID (w/ Battery Cable)
3 RED	AMMETER - RH TERMINAL
4 YELLOW	SOLENOID (Small Terminal)
4 YELLOW	STARTER BUTTON
5 BLUE	+ SIDE AMMETER to JUNCTION BLOCK

Bracket Instructions

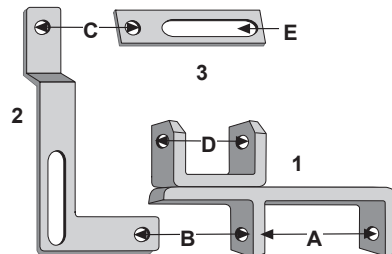

- A= #1 bolts inside Original Generator Bracket
- B= Bolt #2 to front side of Original Generator Bracket (Slotted hole uses timing cover bolt)
- C= Bolt #2 and #3
- D= Alternator
- E= Bolt to top of Alternator